






## Assembly Guide

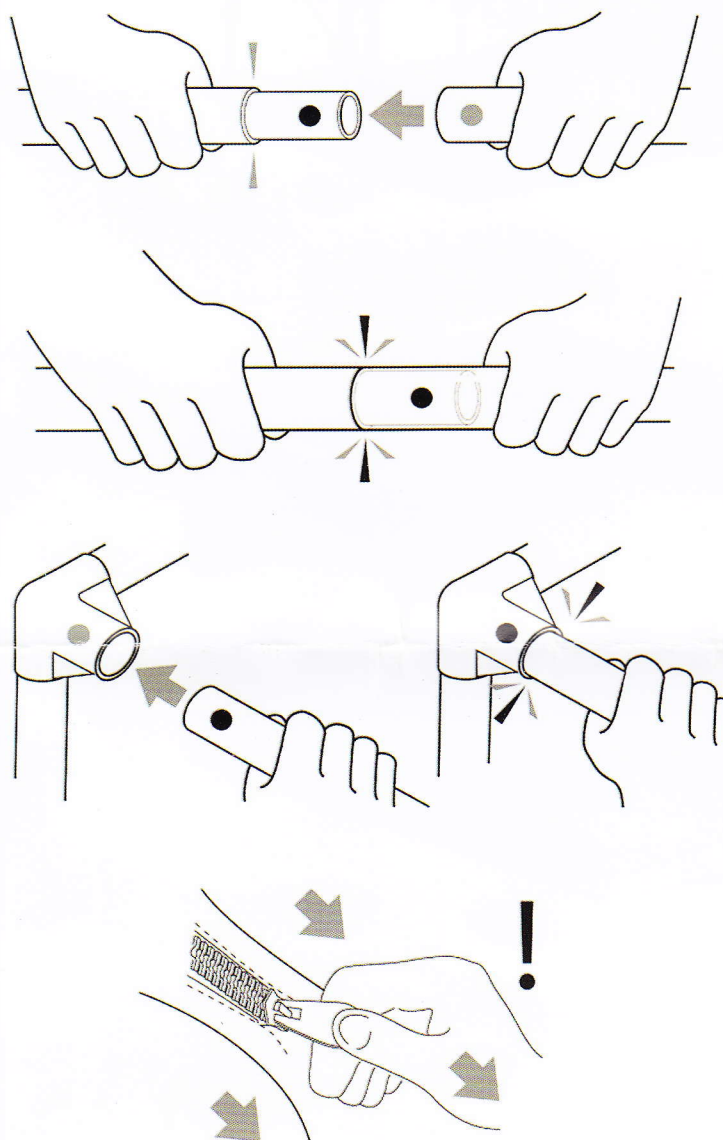

Titan range only - roof assembly supports:

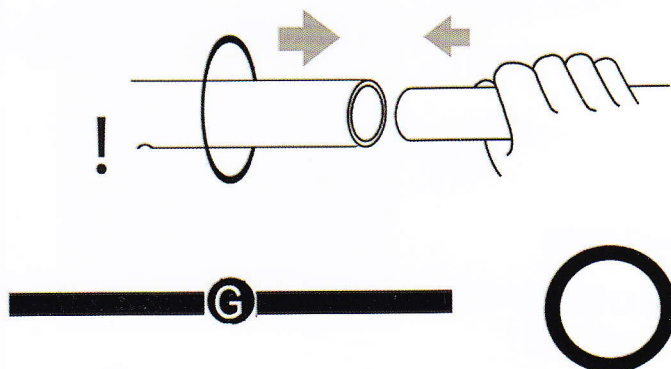


1. Lay out cover with bottom on floor
2. Undo all zips
3. Build frame into base of cover
4. Build frame from floor up
5. Carefully position roof cover over top of frame, from the back to the front
6. Zip up

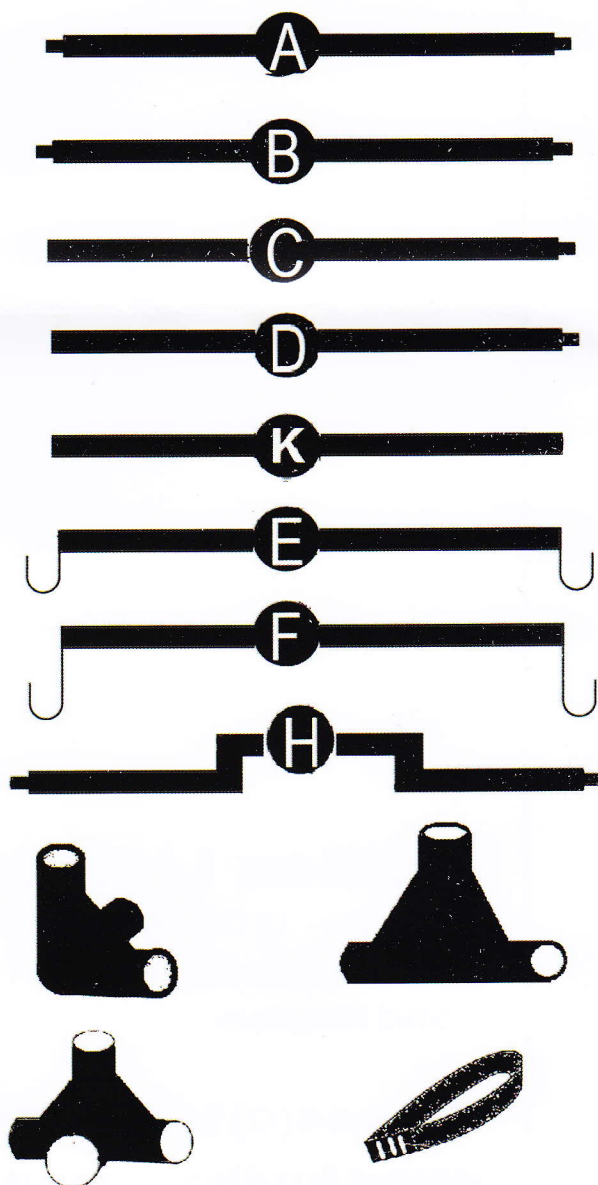


Quantities of each dependant on product type/size





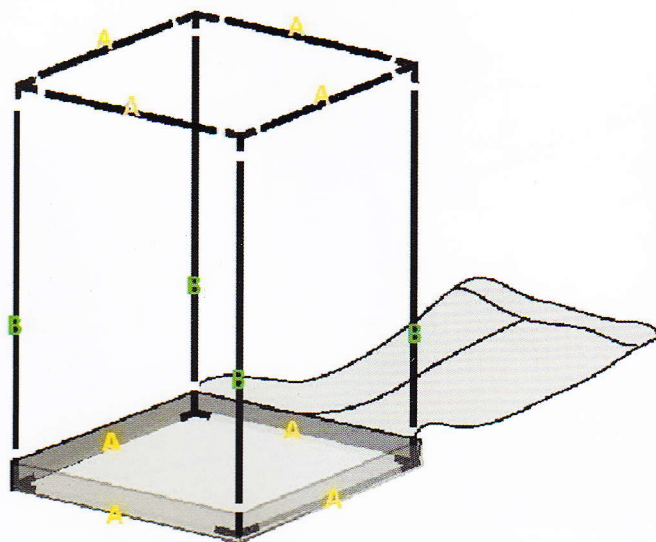


**BudBox Small 75X75X100**

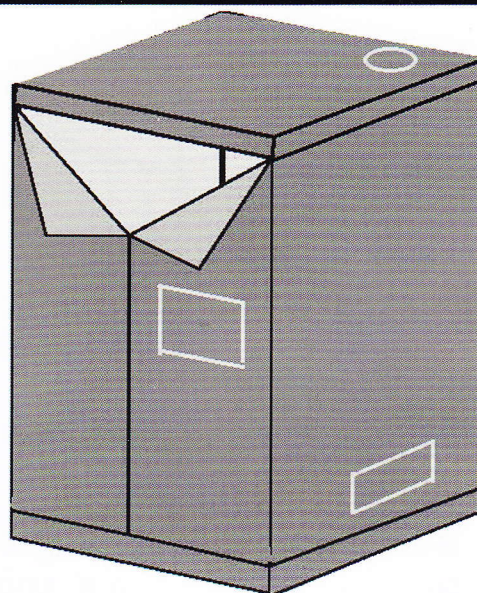



**BudBox Medium shorty 75X75X160**  
**BudBox Medium 75X75X200**  
**BudBox Large Shorty 100 X 100X180**  
**BudBox Large 100 X 100X 200**

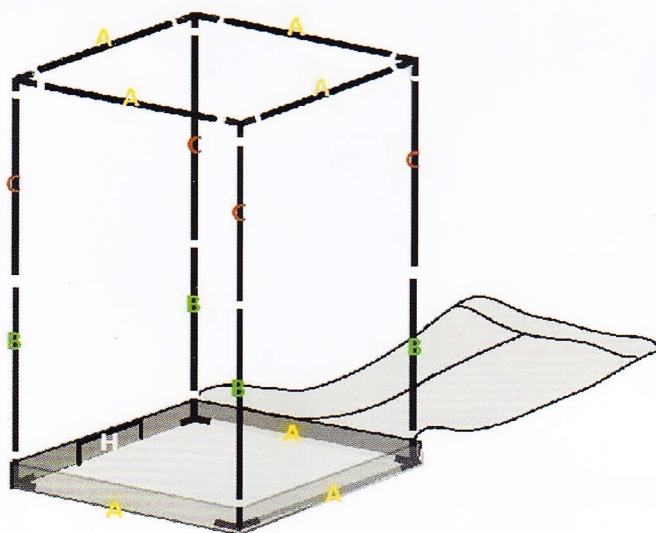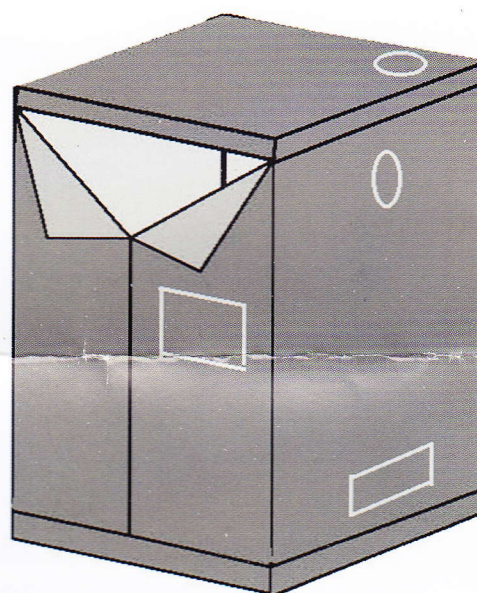



**Budbox XL 120 X 120 X 200**  
**Budbox XL+ 150 X 150 X 200**

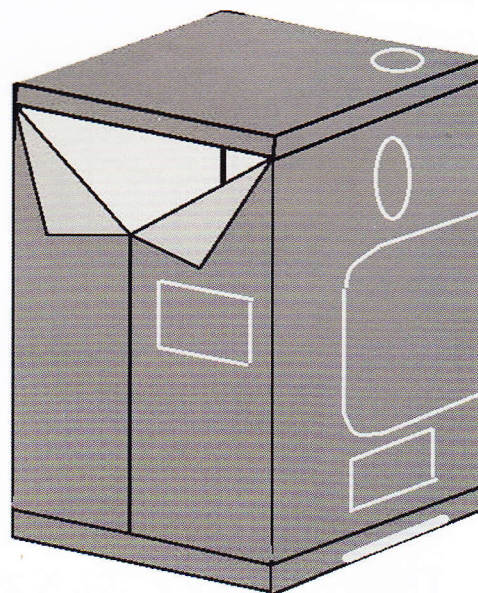





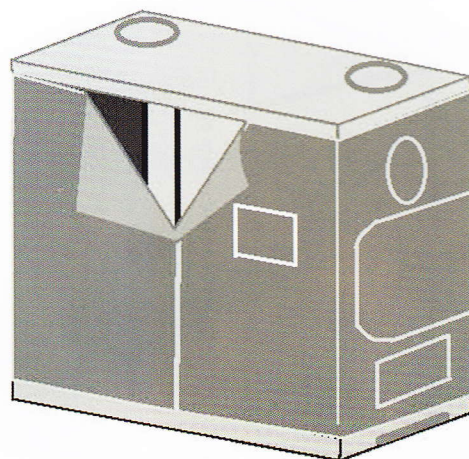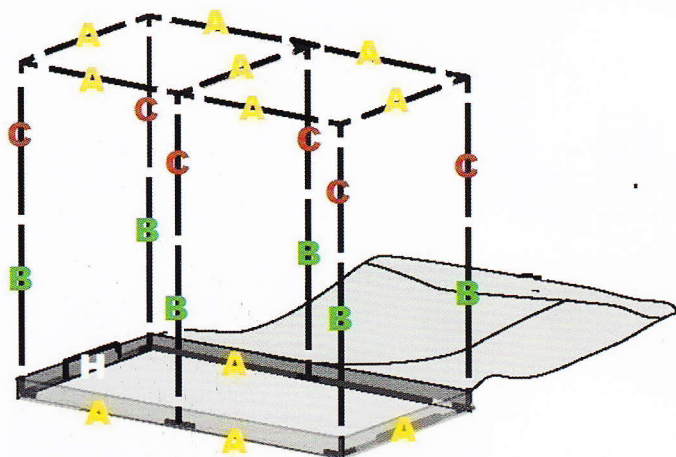

**BudBox XXL** 120 X 240 X 200  
**BudBox XXL+** 150 X 300 X 200

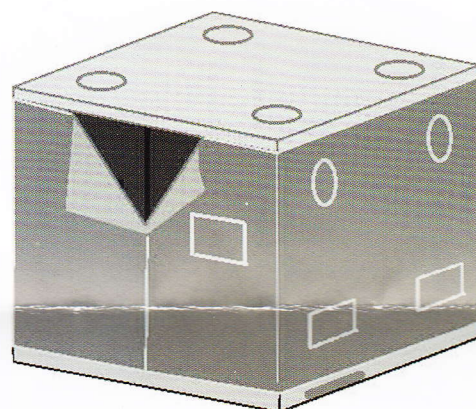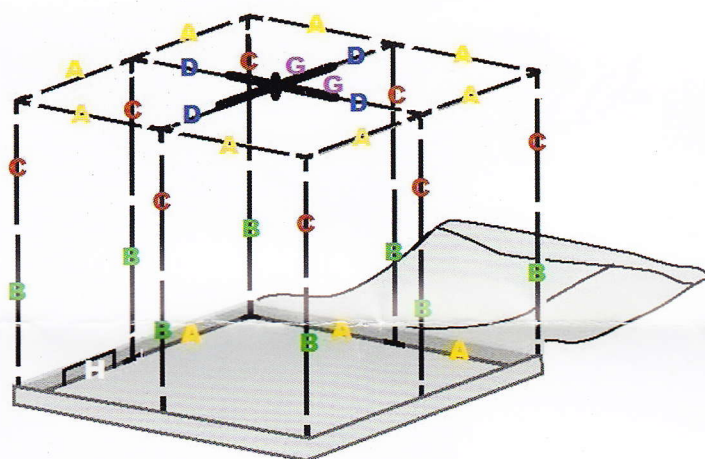

**Titan I** 200 X 200 X 200  
**Titan+** 240 X 240 X 200

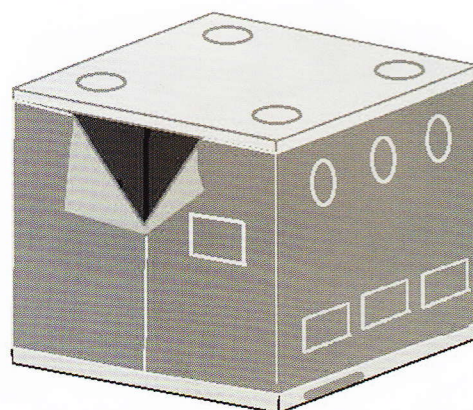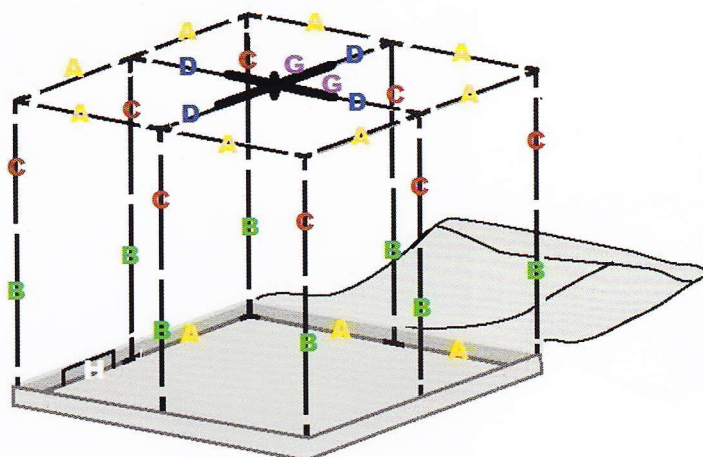

**Titan III** 300 X 300 X 200